


ABOUT YOUR INFINEA mPOS

ASSEMBLY

1. Slide the top section of the Infinea mPOS back cover up and then tilt it back to open, as shown in the figure below.
2. Insert the iPhone with the screen oriented away from the keypad on the Infinea mPOS unit.
3. Tilt the back cover up and slide it back down into place to close the unit.

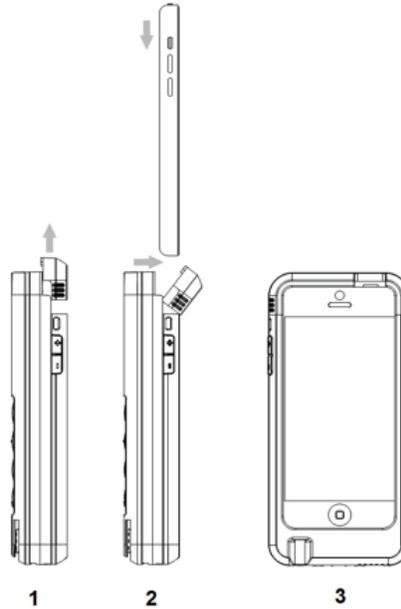


BACK PANEL



INFINEA® mPOS

QUICK START GUIDE

FRONT PANEL

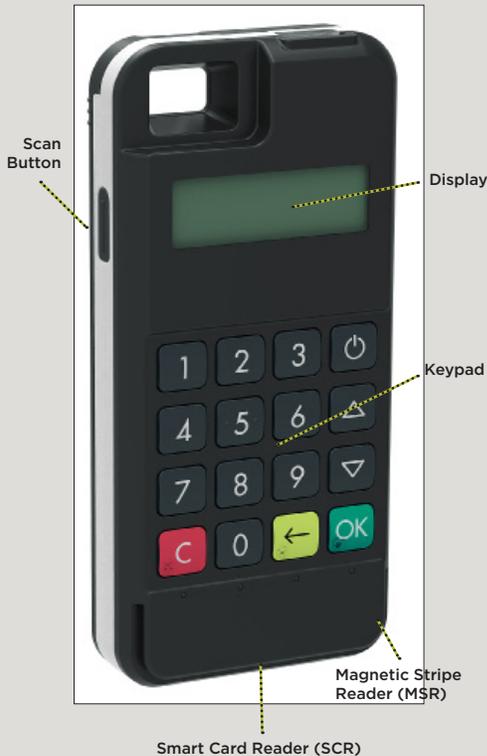

MENU NAVIGATION



The following keypad buttons are used to access and navigate through the various screens and menu options:

BUTTON	DESCRIPTION	
	POWER	Powers on the Infinea mPOS unit.
	SYSTEM MODE	Enters System Mode from home screen.
	UP	Moves up through a list one option at a time.
	DOWN	Moves down through a list one option at a time.
	OK	Selects the active option
	CLEAR	Returns to previous level or exit the service mode

USING THE INFINEA MPOS

To Use the Barcode Scanner:

1. Point Infinea mPOS with the Barcode scanner toward the barcode.
2. Press Scan button.

To Use the Smart Card Reader:

1. Position the smart card with the gold contacts face up.
2. Insert the card into the ICC card reader slot in a smooth, continuous motion until it seats firmly.
3. Provide the Infinea mPOS to the customer for PIN entry.
4. Remove the card when the display indicates the transaction is completed.

To Use the Contactless Card Reader:

1. Place the RFID tag/card over the receiver/transmitter as indicated by the RFID label on the front of the mPOS unit.
2. Press the reading RFID card button on the application. The data will be sent from Infinea mPOS reader to the IOS Device.

To Use the Magnetic Stripe Reader:

1. Position a magnetic card with the stripe face down.
2. Insert the card into the MS card reader slot and then quickly swipe it through.
3. Provide Infinea mPOS to the customer for signature or PIN entry.

