


# INFINEA® X Charging Station (5-Unit)

## QUICK START GUIDE

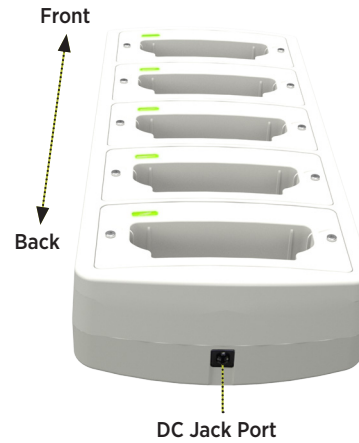

## GETTING STARTED

1. Place the charger on a sturdy, clean and dry surface in a well-ventilated area, and away from direct sunlight.
2. Ensure that the environment temperature is within the safe charging temperature for the charger as well as the Infinea X and iOS device.
3. Plug in the included DC barrel plug to the DC port on the back of the charger. Then connect the AC power adapter to a power outlet
4. Insert the Infinea X into the charger slot, with the iOS screen facing toward the front of the charger unit. When the Infinea X is seated correctly, the LED will light up and indicate the charging status. The time to charge a completely discharged Infinea X Standard Battery is approximately 3.5 hours.
5. Confirm that the Infinea X left-side indicator LED is illuminated.

## LED INDICATORS

The following table describes Infinea X and iOS device charging statuses based on the Infinea X and Charging Station LED colors.

|                |              | INFINEA X   |   |   |
|----------------|--------------|---|---|---|
|                |              | Only Green  | Only Flashing Red   | Green & Flashing Red  |
| <b>CHARGER</b> | <b>Red</b>   | <b>Charger Status</b>   |   |   |
|                |              | There is proper contact between the device and the charger, and charging has begun. |   |   |
|                |              | <b>Infinea X Status</b>   |   |   |
|                | <b>Green</b> | Infinea X battery charging is complete. iOS device is still charging.               | Infinea X battery charging is complete. iOS device is still charging. | Infinea X battery detected and both IX and IOS batteries are charging (green), but IX battery level is very low (flashing red). |
|                |              | <b>Charger Status</b>   |   |   |
|                |              | Charger is in Standby Mode, or Infinea X battery charging is complete.              |   |   |
|                |              | <b>Infinea X Status</b>   |   |   |
|                |              | Infinea X battery charging is complete.   | Infinea X Battery is not detected. iOS device is still charging.      | N/A   |

