


ABOUT YOUR CHARGING STATION



LINEA PRO® 7 Series Spare Battery Charging Station

QUICK START GUIDE

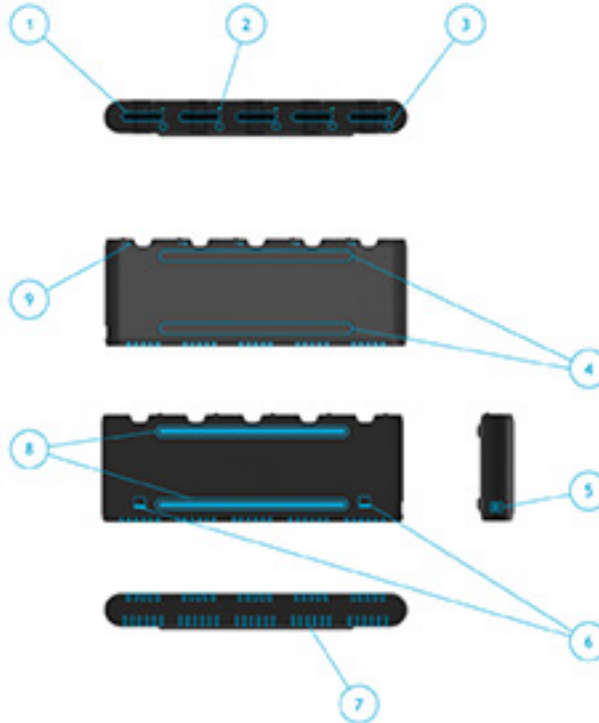

1. Battery slots
2. LED indicators
3. Battery release buttons
4. Top orientation slots
5. Power connector
6. Opening for plastic feet
7. Cooling vents
8. Bottom rubber feet
9. Battery polarity indicators

GETTING STARTED

If the battery is completely discharged, charging time to fully charge is approximately 2 hours and 50 minutes.

1. Plug the DC barrel end of the power supply into the unit.
2. Plug AC power cord into a wall outlet.
3. Confirm LEDs are illuminated indicating charger is connected and ready for charging.
4. Gently insert spare batteries into battery charging slots, paying close attention to lining up the (+) and (-) of the battery with the symbols on the charger.



5. To eject a spare battery, press one of the five release buttons.



Note: This guide applies to charging stations for the standard Linea Pro 7, Linea Pro 7i, and Linea Pro 7+.

PRODUCT SPECIFICATIONS

| Mechanical | |
|-------------------------|--|
| Compatibility | Batteries for Linea Pro 7, Linea Pro 7i, and Linea Pro 7+ |
| Weight | 640g (1.41 lb) |
| Dimensions | 450mm x 135mm x 61mm (17.5" x 5.31" x 2.40") |
| Electrical | |
| Connector | DC barrel connector |
| Input | 100-240V, -1.8A, 50-60Hz 9V 5A (power adapter included) |
| Output to Linea Pro 7 | 5.15V |
| Output to Spare Battery | 4.2V |
| Certifications | FCC, CE, UL, RoHS |
| Environmental | |
| Operating Temperature: | -10°C to +40°C (14°F to 104°F) |
| Storage Temperature: | -15°C to +50°C (5°F to 122°F) |
| Relative Humidity: | 5% to 90% Relative Humidity |

BATTERY STATUS LED INDICATORS

| | |
|--------|---|
| Orange | Inserted battery is charging. |
| Green | Charging complete or device/battery not inserted. |
| None | Power supply not connected. |

